


# Suspended Acoustic Absorber - Alpha Chevron

## Components


### Alpha Chevron

- Part A - x1
- Part B - x2
- Part C - x2
- Part D - x2
- Part E - x2
- Part F - x2
- Part G - x2

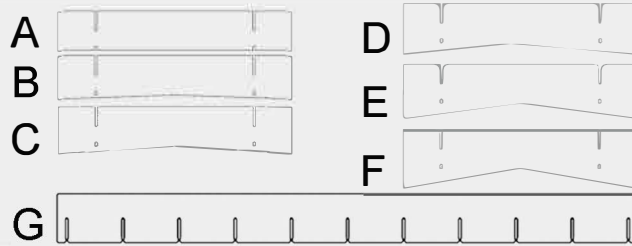

### Installation Kit


- Piece i - x6
- Piece ii - x6
- Piece iii - x6
- Piece iv - x6

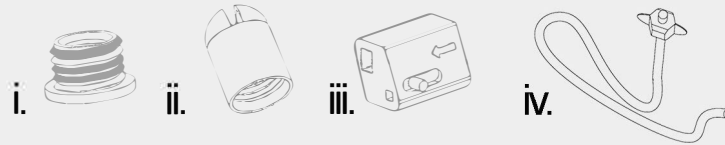

## Assembly


### Step 1

Place both Part G components parallel then slot the Part A component into the centre of both as shown.

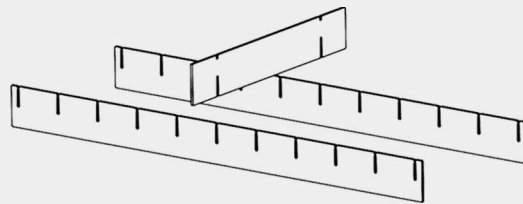

### Step 2

Continue attaching Parts B to F from the centre outwards to reflect the example side view.

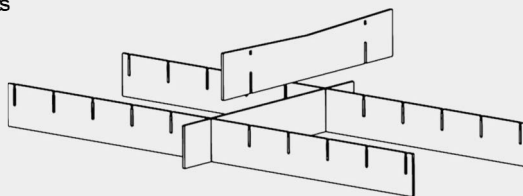


Example side view

## Installation


### Step 1

Take Piece i and attach to the ceiling substrate with an appropriate screw.

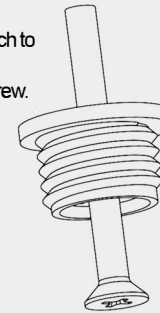


### Step 2

Slide the un-cripped end of Piece iv through Piece ii as shown.

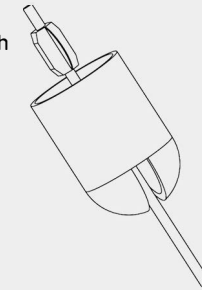


### Step 3

Ensure Piece iv is pulled through Piece ii until the crimped end touches the dome then screw Piece ii to Piece i securing it to the ceiling.

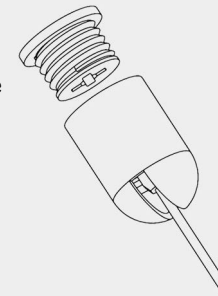

### Step 4

Using the direction arrow on Piece iv take the opposite end of Piece vii and feed it through the opposite end of Piece iii and feed it through as shown.

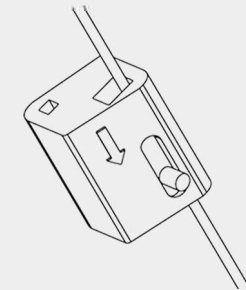

### Step 5

Feed the end of Piece vii through the Alpha Baffle and back through Piece iv. Adjust the height by pulling Piece vii through. If necessary use the protruding pins on Piece iv to release Piece vii.



### Step 6

Once all steps are complete and the Alpha Baffle hangs at the desired height, trim Piece vii to 30mm from Piece iv.

