


Suspended Acoustic Absorber - Alpha Lotus

Components


Alpha Lotus

- Part A - x1
- Part B - x1
- Part C - x9
- Part D - x3
- Part E - x3

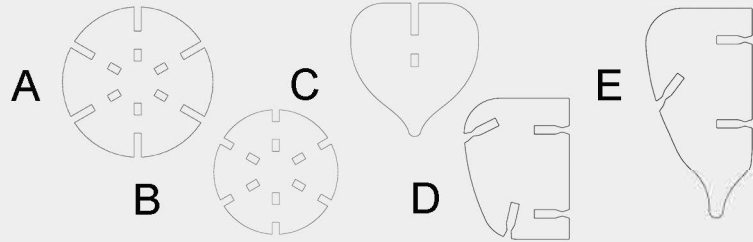

Installation Kit


- Piece i - x3
- Piece ii - x3
- Piece iii - x3
- Piece iv - x3

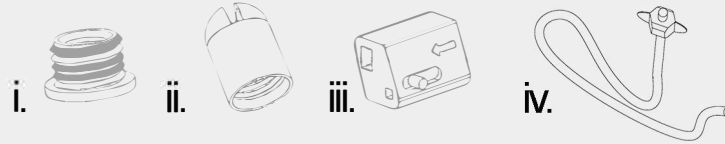

Assembly


Step 1

Slot Part C into Part D as shown

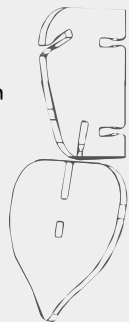

Step 2

Repeat the previous step to the other slot of Part D

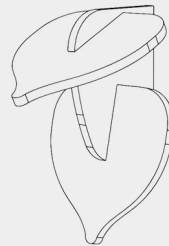


Step 3

Slot Part C into Part E as shown




Step 4

Take one of the assembled Part D components, slot Part A into the top and Part B into the bottom. Repeat with all Part D components.

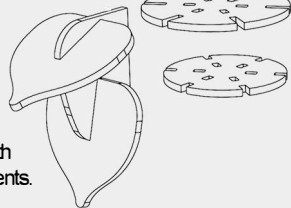

Step 5


Take one of the assembled Part E components, slot Part A into the top and Part B into the bottom. Repeat with all Part E components.

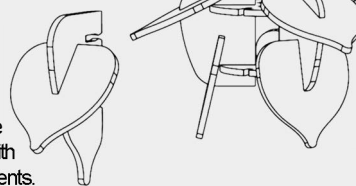

Installation


Step 1

Take Piece i and attach to the ceiling substrate with an appropriate screw.

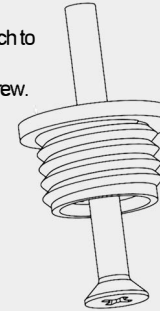


Step 2

Slide the un-crimped end of Piece iv through Piece ii as shown.

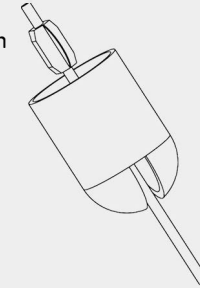


Step 3

Ensure Piece iv is pulled through Piece ii until the crimped end touches the dome then screw Piece ii to Piece i securing it to the ceiling.

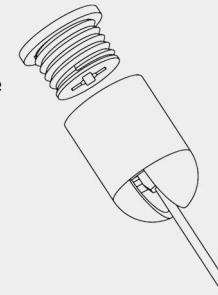

Step 4

Using the direction arrow on Piece iv take the opposite end of Piece vii and feed it through as shown.

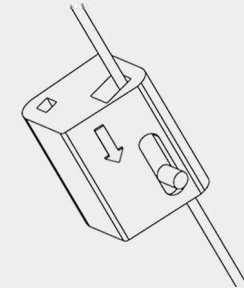

Step 5

Feed the end of Piece vii through the Alpha Baffle and back through Piece iv. Adjust the height by pulling Piece vii through. If necessary use the protruding pins on Piece iv to release Piece vii.



Step 6

Once all steps are complete and the Alpha Baffle hangs at the desired height, trim Piece vii to 30mm from Piece iv.

