


# Suspended Acoustic Absorber - Alpha Pangolin

## Components


### Alpha Pangolin

- Part A - x3
- Part B - x3
- Part C - x18
- Part D - x2

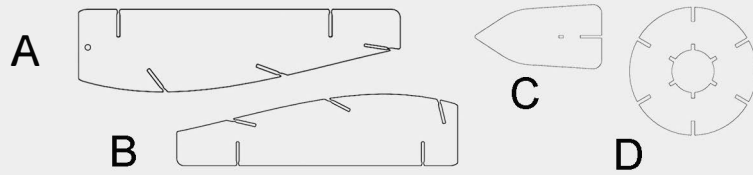

### Installation Kit

- Piece i - x4
- Piece ii - x4
- Piece iii - x4
- Piece iv - x4

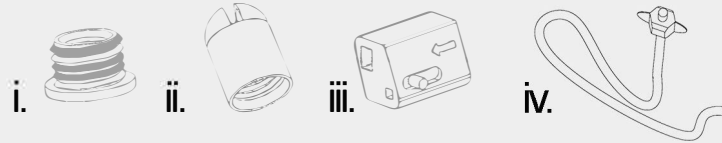

## Assembly

**Step 1** Slot Part C into the lowest slot on Part A




**Step 2** Repeat the previous step for the remaining two slots



**Step 3** Repeat the previous steps with the B and C components




**Step 4** Take both of the Part D components and slot them into the same A or B component. Repeat all the way round ensuring A and B are alternating

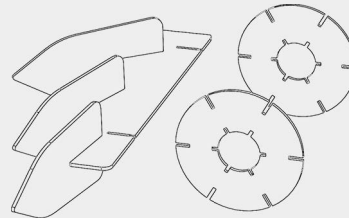

## Installation


### Step 1

Take Piece i and attach to the ceiling substrate with an appropriate screw.

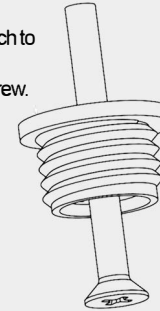


### Step 2

Slide the un-crimped end of Piece iv through Piece ii as shown.

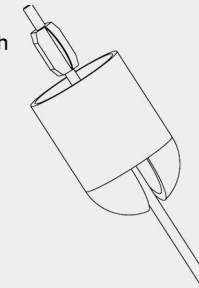


### Step 3

Ensure Piece iv is pulled through Piece ii until the crimped end touches the dome then screw Piece ii to Piece i securing it to the ceiling.

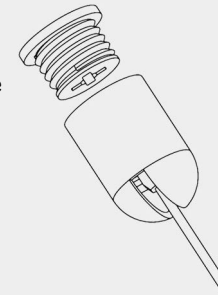

### Step 4

Using the direction arrow on Piece iii take the opposite end of Piece vii and feed it through as shown.

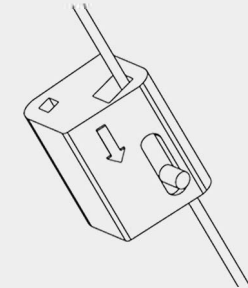

### Step 5

Feed the end of Piece vii through the Alpha Baffle and back through Piece iv. Adjust the height by pulling Piece vii through. If necessary use the protruding pins on Piece iv to release Piece vii.



### Step 6

Once all steps are complete and the Alpha Baffle hangs at the desired height, trim Piece vii to 30mm from Piece iv.

